7-2 Accessories

The following is the list of the accessories for the CRF-362.

Stopper for Short Sheet*1	1 pc

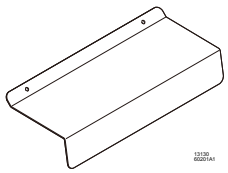

Stopper for Long Sheet*1	1 pc

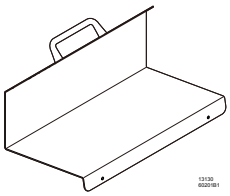

Standard Stopper*1	1 pc

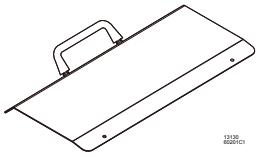

Stack Plate*1	1 pc

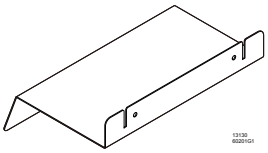

Side Guide*1	1 pc

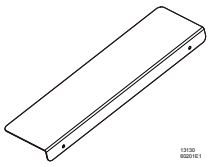

Delivery Conveyor*1	1 pc

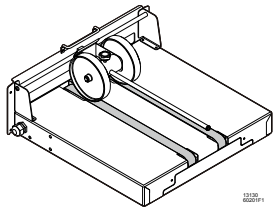

Support Table*1	1 pc

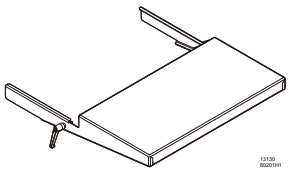

Sheet Guides*2	4 pcs

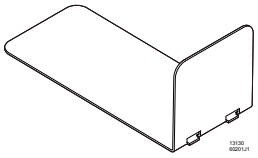

Sheet Guide for Fold Section*1	1 pc

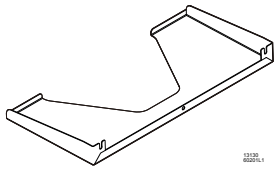

User's Manual	1 pc

The manual that you are reading now.

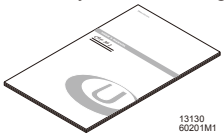

Quick Start Guide	1 pc

Parts Book	1 pc

Ratchet Wrench	1 pc

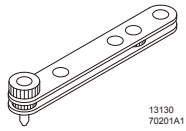

Lids	2 pcs

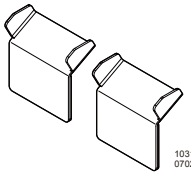

1st Creasing Unit 1.3 mm / 0.051"	1 pc

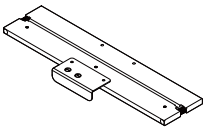

2nd Creasing Unit 1.3 mm / 0.051"	1 pc

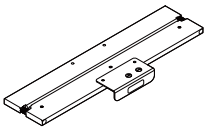

*1: See chapter 6 "Installation" for instructions on how to install this.

*2: See the Quick Start Guide for instructions on how to use this.

7-3 Consumables

The following is the list of the consumables for the CRF-362.

Double Feed Stop Pad Assembly

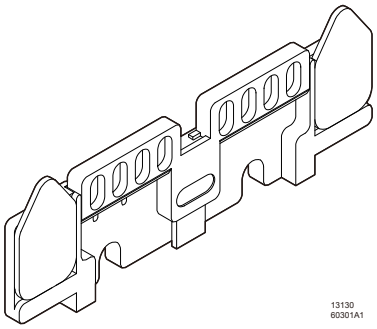

Partsbook Fig 40 - Index 11
See page 100 for instructions on how to replace it.

Air Filter

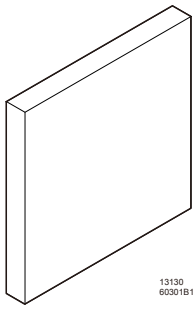

Partsbook Fig 40 - Index 13
See page 105 for instructions on how to replace it.

7-4 Option

The following is the list of the optional devices for the CRF-362.

Creasing Unit

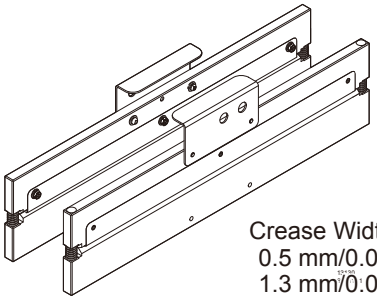

Crease Width
0.5 mm/0.020" (Thin)
1.3 mm/0.051" (Thick)
2.0 mm/0.079" (Thick)
(The standard equipped crease width is "0.8 mm /0.031".)

See page 106 for instructions on how to replace it.

PRF-36 Impact Perforation Unit

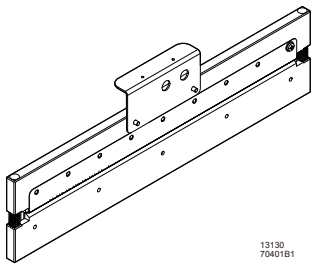

Perforating can be made instead of creasing by replacing the first creasing unit with the impact perforation unit. For the installation method, see the user's manual for the PRF-36.